


加長煞車搖臂之培林套管安裝說明圖

BEARING TYPE LONGER BRAKE REAR ARM INSTALLING MANUAL

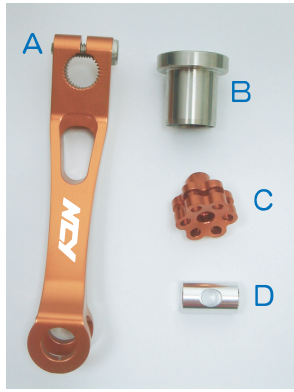


諸元表：
 A-加長煞車搖臂
 B-培林套管
 C-煞車調整螺絲
 D-煞車塊


PARTS LIST:
 A---LONGER BRAKE REAR ARM
 B---BEARING BUSH
 C---BRAKE ADJUST SCREW
 D---PIN




1. 輪框拆下
 TAKE OFF RIM.

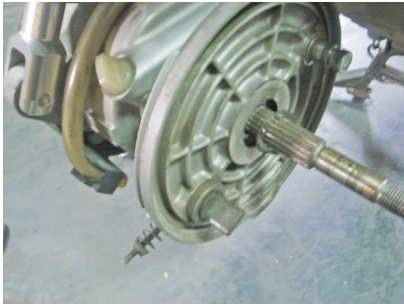


2. 取出煞車皮
 TAKE OFF BRAKE SHOE.

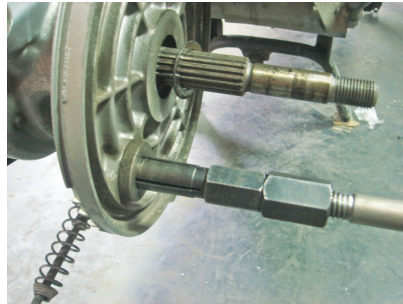

3. 培林取出工具拆卸
 USE TOOL TO TAKE OFF BEARING.

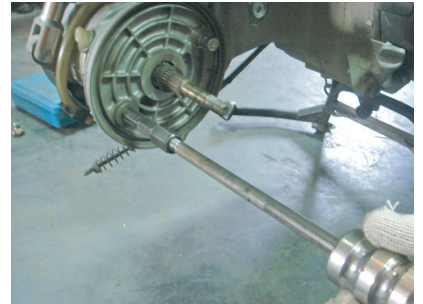

3. 培林取出工具拆卸
 USE TOOL TO TAKE OFF BEARING.

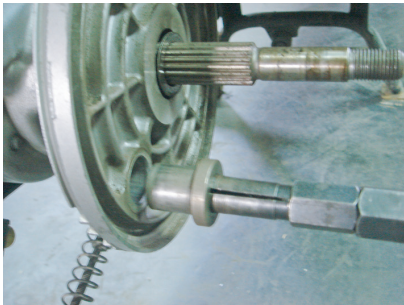

4. 取出原廠煞車套管
 TAKE OFF ORIGINAL BRAKE BUSH.



5. NCV專利培林套管，安裝前抹上少許機油，方便安裝
 PLEASE ADD SOME ENGINE OIL BEFORE INSTALLING BEARING.




6. 以鐵鎚敲入培林套管
 LIGHTLY BEAT BEARING BUSH INSIDE.




7. 裝回原車煞車臂桿
 INSTALL ORIGINAL BEARING ROD.



8. 裝回煞車皮
 INSTALL BRAKE SHOE.

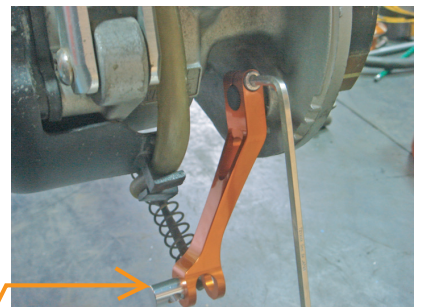

9. 安裝加長煞車搖臂，調整適當角度用六角板手鎖緊
 INSTALL LONGER BRAKE REAR ARM AND THEN ADJUST THE ANGLE. FINALLY USE RATCHETING WRENCH TO LOCK WELL.

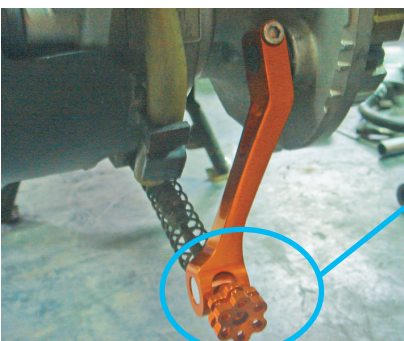

10. 裝上煞車調整鈕
 INSTALL BRAKE ADJUST SCREW WELL.



11. 完成圖 FINISH.