




BEARING TYPE LONGER BRAKE REAR ARM INSTALLING MANUAL

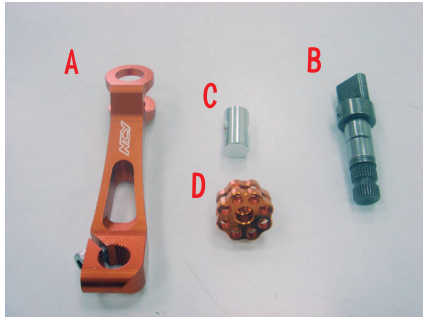


PARTS LIST:
A---LONGER BRAKE REAR ARM
B---BEARING ROD FOR LONGER
BRAKE REAR ARM
C---PIN
D---BRAKE ADJUST SCREW

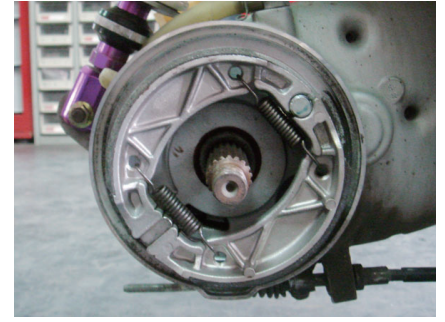


1. TAKE OFF RIM.

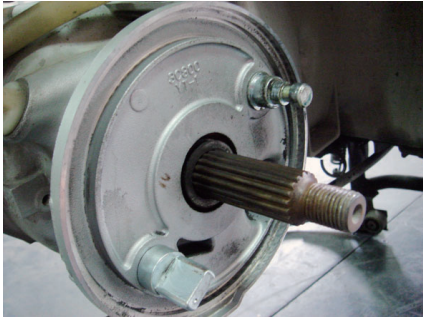

2. TAKE OFF BRAKE SHOE.

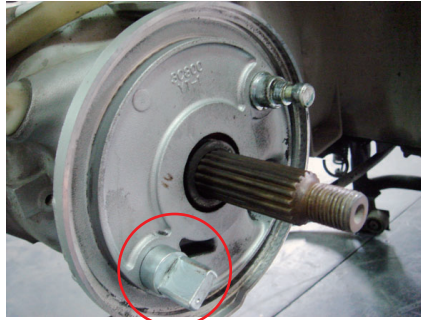

3. TAKE OFF ORIGINAL ROD FOR
BRAKE REAR ARM.

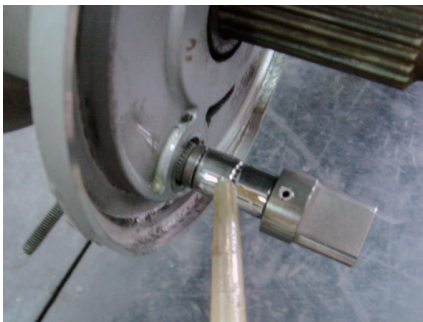

4. PLEASE ADD SOME ENGINE OIL
BEFORE INSTALLING BEARING ROD
FOR LONGER BRAKE REAR ARM.



5. LIGHTLY BEAT BEARING ROD
FOR LONGER BRAKE REAR ARM.



6. INSTALL BRAKE SHOE.



NOTE: DO NOT NEED TO INSTALL
ORIGINAL IRON SHEET.



7. INSTALL LONGER BRAKE REAR
ARM AND THEN ADJUST THE
ANGLE. FINALLY USE RATCHETING
WRENCH TO LOCK WELL, INSTALL
BRAKE ADJUST SCREW WELL.



8. FINISH.