

## **VENTO 150**



## VENTO 150 STAINLESS EXHAUST PIPE INSTALLING INSTRUCTION MANUAL



1. CONNECT FRONT PIPE WITH TAIL PIPE



2. INSTALL EXHAUST PIPE



3. LOCK IT WELL WITH EXHAUST PIPE SCREW







4. LOCK THE BUSH AND RING IN ORDER



5. FINISH

