

AIR-FUEL RATIO ADJUSTER INSTALLING MANUAL FOR YAMAHA MIO J 115




1. AIR-FUEL RATIO ADJUSTER
2. GROUND WIRE (-)
3. CONNECT ORIGINAL INJECTOR
4. CONNECT ORIGINAL INJECTOR WIRE SET-RED (+); BLUE (SIGNAL)
5. CONNECTOR OF ADJUSTER
6. CONNECTOR
7. PIN
8. WATERPROOF PLUG



1. REMOVE LUGGAGE BOX.



2. CUT INJECTOR WIRE SET.

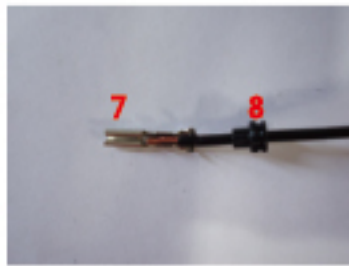

3. INSERT WATERPROOF PLUG AND PIN INTO THE CUT WIRE (STEP 2).



4. USE PLIERS TO FASTEN PIN.



5. FASTEN TWO WIRES AS ABOVE PHOTO.



6. TURN ON THE SWITCH AND CHECK WHICH WIRE IS (+).




7. INSERT THE WIRE (+) INTO NO.6 CONNECTOR [CONNECT TO NO.5 CONNECTOR (RED)].



8. LOCK GROUND WIRE INTO ENGINE BODY.



9. CONNECT NCY WIRE TO ADJUSTER AND TURN ON SWITCH TO CHECK WHETHER ADJUSTER SHOWS SIGN OR NOT.

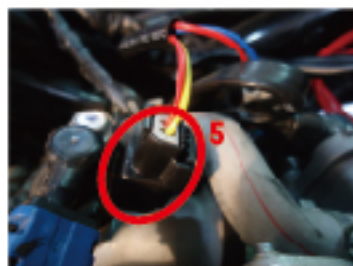

10. INSERT NCY WIRE SET INTO NO.3.



11. PIERCE A HOLE IN THE LUGGAGE BOX TO MAKE WIRE PASS THROUGH.



12. USE THE VELCRO TO ATTACH ADJUSTER IN THE LUGGAGE BOX. THIS ADJUSTER IS NOT WATERPROOF.

※ MANUAL IS ON THE PACKAGE.