

# 晶片防盜鎖安裝說明


## INSTALLING MANUAL FOR IC ANTI-THEFT SWITCH



**步驟1: 先將小盾拆下**  
STEP 1: TAKE OFF FRONT COVER.



**步驟2: 將頭燈及前車殼一同拆下**  
STEP 2: TAKE OFF HEAD LIGHT & COVER.

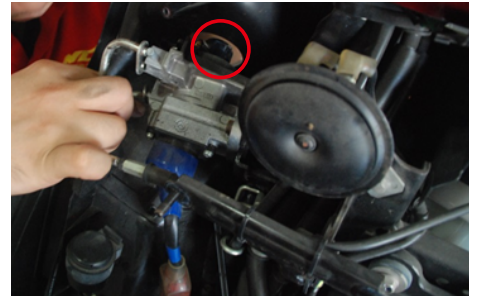


**步驟3: 將連接油箱蓋與行李箱的鋼索取下，並將原廠鎖頭面板取下**  
STEP 3: TAKE OFF THE STEEL WIRE CONNECTING TO OIL TANK & LUGGAGE BOX. TAKE OFF ORIGINAL SWITCH PANEL.

\*將紅圈處支螺絲取下即可拆下原廠鎖頭面板  
TAKE APART BOLTS (RED CIRCLE) TO TAKE OFF ORIGINAL SWITCH PANEL.



**步驟4: 將原廠鎖頭取下並將其電線拔除**  
STEP 4: TAKE OFF ORIGINAL SWITCH & PULL OUT WIRE HARNESS.

\*標示處為原廠鎖頭之固定螺絲  
RED CIRCLE IS THE FIXED BOLT OF ORIGINAL SWITCH.

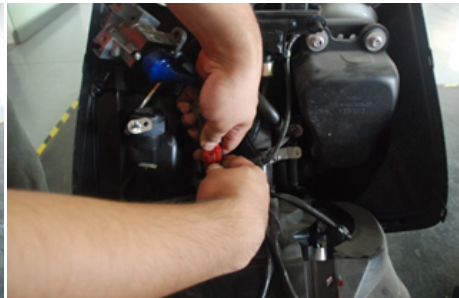

**步驟5: 將晶片防盜鎖之面板取下**  
STEP 5: TAKE OFF IC ANTI-THEFT SWITCH PANEL.



**步驟6: 安裝行李箱及油箱蓋鋼索**  
STEP 6: INSTALL THE STEEL WIRE CONNECTING TO OIL TANK & LUGGAGE BOX.



**步驟7: 安裝鎖頭座及接上電線，負極與喇叭一起鎖附並套好防水套**(照片上無防水套請依實物為主)

STEP 7: INSTALL SWITCH POST & CONNECT WIRE HARNESS, "-" & HORN CONNECT TOGETHER AND PUT ON WATERPROOF COVER. (PHOTO NO WATERPROOF COVER, REAL PRODUCT W/ WATERPROOF COVER)



**步驟7: 測試功能是否正常，測試完成後固定線組及防盜器本體**(請依照個人喜好固定)

STEP 7: TEST FUNCTION AVAILABLE OR NOT. AFTER TESTING, FIX WIRE HARNESS AND ANTI-THEFT SWITCH. (FIX BY PERSONAL REQUIREMENT)



**步驟8: 安裝完成後依序將車殼組回**  
STEP 8: AFTER FINISHING, INSTALL COVER BACK.



1. KEY 內附晶片，兩支KEY需分開放置防止干擾，也請妥善保管，不可遺失。  
**IC in key, put 2 keys away for anti-interference.**
2. 平常OFF或LOCK時，有一紅燈警戒。  
**As OFF or LOCK, red light on alarm.**
3. KEY靠近或插入時，在OFF或LOCK位置轉3秒，轉到ON時則全時亮燈，可發動機車。  
**Key touches or puts in switch, as OFF or LOCK, light on 3 seconds.  
Turn to ON, all light on to start engine.**
4. 裝設時，直接替換開關，完全不需變更線路，接地線接於非絕緣處即可。  
**Install switch directly, no need to change any wire harness.  
Connect Ground Wire to uninsulated place (see photo).**
5. 機車欲熄火，KEY由ON轉到LOCK或OFF時，若車主鑰匙未拔則有嗶嗶提示音警示，且面蓋照明閃燈，一直持續10秒。  
**As turning off engine, key from ON to LOCK or OFF; if forgetting to take away the key, alarm rings and cover flashing light 10 seconds.**
6. 若使用錯誤晶片KEY或未有晶片的KEY轉到ON則蜂鳴器嗶嗶嗶聲響起，面蓋照明閃爍，一直持續60秒，且警戒紅燈亮起，不輸出電源，無法啟動。  
**If using wrong or w/o IC key, as key ON, alarm rings and cover flashing light 60 seconds.  
No electricity can't start engine.**
7. 若遇晶片鎖故障，其緊急救援方式為 KEY插入由OFF轉至ON，此時ON再轉回OFF為1 CYCLE，第10 CYCLE 在OFF位置響一長嗶音，此時快轉至ON，LED燈發亮，可啟動電源(需快速轉動，若強力破壞不可能再時間內完成)。  
**As IC switch breakdown, turn key from OFF to ON, from ON to OFF as 1 cycle.  
Fast repeat (about 1 second) 10 cycles.  
As on the 10th cycle, key OFF, long beep.  
Fast switch to ON, LED light on, can start engine.**



1. 建議接地線鎖附位置  
**Suggest Ground Wire install place.**



2. 用砂紙磨掉表面烤漆減少絕緣  
**Use sandpaper to rub the coating surface to decrease insulation.**



3. 將接地線接頭鎖附在喇叭支架螺絲孔上  
**Put Ground Wire connector on the screw of horn bracket.**



4. 鎖附完成  
**Finish installing.**