

磷酸鋰鐵啓動電池

LITHIUM IRON PHOSPHATE BATTERY **■** 安裝説明書

- 感謝您購買 **M** 產品,在此向您致上萬分謝意。使用之前,請您務必詳讀並參照安裝説明,並且正確組裝。
- Before installing, please read Installing Manual well.

1-1 配件 Accessories

超級電容·適用各大廠新智能啟動系統車系

Super Capacitor · Suitable for Smart Motor Generator System

12V8AH

注意事項

- 1. 全新電池安裝前無需充電。
- 2. 若有額外充電需求,請使用鋰鐵電池專用充電器。
- 3. 若遇三次嘗試無法發動,請關掉電門等待20秒,待車壓恢復至 13V以上再發動。
- 4. 啟動狀態下,若電壓低於12.5V或高於16V以上,請檢查機車回充系統。
- 5. 紅色線為正極,黑色線為負極,請勿反接避免短路。正負反接導致電池 損壞,即不保固。
- 6. 一個月以上長時間未發動車,請先發動15分鐘讓機車電池自行回充,以保持13~13.7V間的穩定電壓。
- 7. 請勿拆開電池,自行將電池拆開、擴充、泡水、修改則不保固。
- 8. 此電池僅供機車啟動使用,勿做為他用。
- 1. The new battery does not need to be charged before installation.
- 2. If it needs to be charged, please use the special charger for lithium iron phosphate battery.
- 3. When try to start three times but failed, please close the switch and wait 20 seconds. Until the voltage restore to 13V, then it could start again.
- 4. When starting, if the voltage is lower than 12.5V or higher than 16V, please check the recharge system of motorcycle.
- 5. Red wire is positive electrode, and black wire is negative electrode. Please do not reverse the wires to avoid short circuit. The battery will break down, if positive and negative wires are reversed. It would not covered under warranty.
- 6. If the motorcycle does not start over one month, please start for 15 minutes and let the battery recharge by itself to keep the stable voltage between 13~13.7V.
- 7. Do not take apart the battery. It would not covered under warranty, if the battery is taken apart, extended or soaked.
- 8. The battery is only for motorcycle start use, do not use it in other ways.


ио.5



■■ 1-2 安裝說明-示意圖 Installing Manual

安裝方式

- 1. 將NCY鋰鐵電池放置在原鉛酸電池的托盤上。
- 2. 將正極紅色電線接於電池正極, ①並且鎖附固定。
- 3. 將負極黑色電線接於電池負極 → 並且鎖附固定。
- 4. 再啟動機車引擎,即安裝完成。
- ※ 如電極無法鎖附電池上,請自行磨除干涉處, 或自行用墊片墊出。
- 1. Put the NCY Lithium Iron Phosphate Battery on tray to instead Lead Acid Battery.
- 2. Connect the red positive wire to the positive pole of the battery, \bigoplus and then lock the screw.
- 3. Connect the black negative wire to the negative pole of the battery, \bigcirc and then lock the screw.
- 4. Start the engine, then the installation is complete.
- If the electrode could not lock on the battery, please grind away the interference area or use the washer to spacer out.

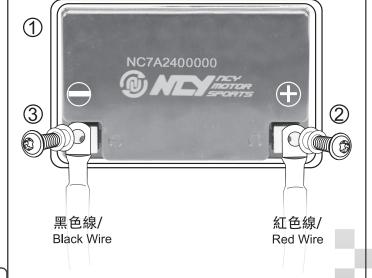



本產品已投保產品責任險

Our products have been covered product liability insurance



磷酸鋰鐵啓動電池

LITHIUM IRON PHOSPHATE BATTERY ■ 安裝説明書

- 感謝您購買 ★左子 產品,在此向您致上萬分謝意。使用之前,請您務必詳讀並參照安裝説明,並且正確組裝。
- Before installing, please read Installing Manual well.

1-1 配件 Accessories

超級電容・適用各大廠新智能啟動系統車系

Super Capacitor · Suitable for Smart Motor Generator System

12V10AH

注意事項

- 1. 全新電池安裝前無需充電。
- 2. 若有額外充電需求,請使用鋰鐵電池專用充電器。
- 3. 若遇三次嘗試無法發動,請關掉電門等待20秒,待車壓恢復至 13V以上再發動。
- 4. 啟動狀態下,若電壓低於12.5V或高於16V以上,請檢查機車回充系統。
- 5. 紅色線為正極,黑色線為負極,請勿反接避免短路。正負反接導致電池 損壞,即不保固。
- 6. 一個月以上長時間未發動車,請先發動15分鐘讓機車電池自行回充, 以保持13~13.7V間的穩定電壓。
- 7. 請勿拆開電池,自行將電池拆開、擴充、泡水、修改則不保固。
- 8. 此電池僅供機車啟動使用,勿做為他用。
- 1. The new battery does not need to be charged before installation.
- 2. If it needs to be charged, please use the special charger for lithium iron phosphate battery.
- 3. When try to start three times but failed, please close the switch and wait 20 seconds. Until the voltage restore to 13V, then it could start again.
- 4. When starting, if the voltage is lower than 12.5V or higher than 16V, please check the recharge system of motorcycle.
- 5. Red wire is positive electrode, and black wire is negative electrode. Please do not reverse the wires to avoid short circuit. The battery will break down, if positive and negative wires are reversed. It would not covered under warranty.
- 6. If the motorcycle does not start over one month, please start for 15 minutes and let the battery recharge by itself to keep the stable voltage between 13~13.7V.
- 7. Do not take apart the battery. It would not covered under warranty, if the battery is taken apart, extended or soaked.
- 8. The battery is only for motorcycle start use, do not use it in other ways.






■■ 1-2 安裝說明-示意圖 Installing Manual

安裝方式

- 1. 將NCY鋰鐵電池放置在原鉛酸電池的托盤上。
- 2. 將正極紅色電線接於電池正極, ①並且鎖附固定。
- 3. 將負極黑色電線接於電池負極, →並且鎖附固定。
- 4. 再啟動機車引擎,即安裝完成。
- ※ 如電極無法鎖附電池上,請自行磨除干涉處, 或自行用墊片墊出。
- 1. Put the NCY Lithium Iron Phosphate Battery on tray to instead Lead Acid Battery.
- 2. Connect the red positive wire to the positive pole of the battery, + and then lock the screw.
- 3. Connect the black negative wire to the negative pole of the battery, and then lock the screw.
- 4. Start the engine, then the installation is complete.
- * If the electrode could not lock on the battery, please grind away the interference area or use the washer to spacer out.

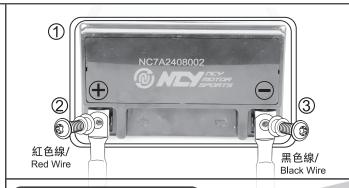

※7B電池提醒/ Reminder of 7B

六角螺絲/十字螺絲適用鎖附 電池正面螺牙, 電池上螺牙 只適用鎖附十字螺絲。

Hex Head Cap Screw/ Phillips Screw are suitable to lock in the front of the battery. Thread of the battery only available for Phillips Screw.





本產品已投保產品責任險