

空燃比調整器接線對照表 WIRE CONNECTION TABLE

車種 MODEL	調整器藍色線 BLUE WIRE OF ADJUSTER	接頭左、右側 SIDE OF PLUG	調整器紅色線 RED WIRE OF ADJUSTER	接頭左、右側 SIDE OF PLUG
VJR	白紅色線 WHITE RED WIRE	右側 RIGHT	黑或黑藍色線 BLACK/BLACK BLUE WIRE	左側 LEFT
MANY	白紅色線 WHITE RED WIRE	右側 RIGHT	黑或黑藍色線 BLACK/BLACK BLUE WIRE	左側 LEFT
RACING	白紅色線 WHITE RED WIRE	左側 LEFT	黑或黑藍色線 BLACK/BLACK BLUE WIRE	右側 RIGHT
NEW FIGHTER	綠藍色線 GREEN BLUE WIRE	左側 LEFT	紅黃色線 RED YELLOW WIRE	右側 RIGHT
JET POWER	綠藍色線 GREEN BLUE WIRE	右側 RIGHT	紅黃色線 RED YELLOW WIRE	左側 LEFT
TINI	綠藍色線 GREEN BLUE WIRE	右側 RIGHT	紅黃色線 RED YELLOW WIRE	左側 LEFT
小雲豹 (MINI 125)	棕白色線 BROWN WHITE WIRE	右側 RIGHT	黑紅色線 BLACK RED WIRE	左側 LEFT
雲豹 150 (HD 150)	棕白色線 BROWN WHITE WIRE	右側 RIGHT	黑紅色線 BLACK RED WIRE	左側 LEFT
灰狼 (HD 150D)	棕白色線 BROWN WHITE WIRE	右側 RIGHT	黑紅色線 BLACK RED WIRE	左側 LEFT
獵豹 (HD 150F)	棕白色線 BROWN WHITE WIRE	右側 RIGHT	黑紅色線 BLACK RED WIRE	左側 LEFT

以V-JR為例，調整器藍色線，需對應車台線組的白紅色線(圖示接頭右側)，以此類同...調整器紅色線，需對應車台線組的黑藍色線(圖示接頭左側)
※ 以上對照表為已測試車種，如無上述車種，可以自行依照說明書安裝測試。

EX. FOR MODEL VJR
BLUE WIRE OF ADJUSTER FITS WHITE RED WIRE OF THE SCOOTER (SEE PLUG PICTURE OF RIGHT),
VICE VERSA, RED WIRE OF ADJUSTER FITS BLACK BLUE WIRE OF THE SCOOTER (SEE PLUG PICTURE OF LEFT).
*THE MODELS SHOWN IN TABLE ARE CHECKED BY NCY TECHNICIAN. FOR OTHER MODELS,
PLEASE FOLLOW THE INSTALLING MANUAL.



空燃比調整器建議調整數值

RECOMMEND VALUE FOR AIR-FUEL RATIO ADJUSTER

無更換油嘴(原廠油嘴) ORIGINAL INJECTOR		有更換加大噴油嘴(134 CC/min) BORE UP INJECTOR (134CC/MIN)	
改 55缸 55MM	建議調整20%~40% RECOMMEND # 20%~40%	改 55缸 55MM	建議調整5%~10% RECOMMEND # 5%~10%
58.5缸 58.5MM	建議調整40%~55% RECOMMEND # 40%~55%	58.5缸 58.5MM	建議調整10%~25% RECOMMEND # 10%~25%
61缸 61MM	建議調整55%~70% RECOMMEND # 55%~70%	61缸 61MM	建議調整25%~40% RECOMMEND # 25%~40%
63缸 63MM	建議調整70%~90% RECOMMEND # 70%~90%	63缸 63MM	建議調整40%~55% RECOMMEND # 40%~55%

※以上數據為參考使用，實際數值須依車輛改裝情形而定
*THE DATA IS FOR REFERENCE ONLY, REAL VALUE DEPENDS ON THE SCOOTER CONDITION.

調整範圍 -99% ~ +99%

ADJUSTABLE RANGE FROM -99%~+99%

轉速對照表


RPM TABLE

1~9	A	B	C	D	E	H
X1000RPM	10000	11000	12000	13000	14000	15000

單位:RPM

空燃比調整器【加強版】安裝說明-光陽、三陽、哈特佛車種

AIR-FUEL RATIO ADJUSTER SET PLUS VERSION INSTALLING MANUAL FOR KYMCO, SYM & HARTFORD SCOOTERS

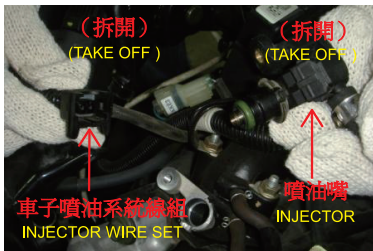

- 將坐墊拆下將噴油嘴及噴油配線拆除
1.TAKE OFF THE SEAT AND REMOVE INJECTOR AND INJECTOR WIRE SET.



- 將空燃比調整器之黃、紅色之接線接噴油嘴，黑色線接於車台
2.PLEASE CONNECT THE YELLOW RED WIRE SET PLUG OF AIR-FUEL RATIO ADJUSTER TO INJECTOR, BLACK WIRE (GND) TO THE SCOOTER.



- 空燃比調整器紅色線及藍色線接在車子噴油系統之線組，可參考對照空燃比調整器接線對照表
3.RED & BLUE WIRES OF AIR-FUEL RATIO ADJUSTER CONNECT TO INJECTOR WIRE SET. PLEASE REFER TO WIRE CONNECTION TABLE.



- 打開電源如果有安裝確實，空燃比調整器顯示燈會亮起
4.TURN ON THE SWITCH; IF THE LIGHT IS ON, IT MEANS THE INSTALLATION IS CORRECT.



- 按下發動鈕，檢示噴油嘴是否有噴油(請看註記一)
5.START UP THE SCOOTER TO CHECK IF THE INJECTOR IS WORKING. (SEE NOTE 1)



- 確認完後將紅、藍色線接於接頭，並安裝於車子噴油系統之線組
6.AFTER CHECKING, PLEASE CONNECT THE RED & BLUE WIRES TO THE PLUG AND INSTALL THEM ON INJECTOR WIRE SET.



- 將噴油嘴裝回歧管，將調整器本體用魔鬼氈黏於置物箱內，完成安裝
7. INSTALL INJECTOR TO MANIFOLD. USE VELCRO TO ATTACH THE ADJUSTER IN THE LUGGAGE BOX.

註記一： 如果沒有噴油，請依步驟4的將藍色及紅色線對調過來安裝，車子需注意是否有暗鎖，有座墊暗鎖之車輛，需將配線接回，否則接線正確也不會噴油。

NOTE 1:
IF THE INJECTOR DOES NOT WORK, PLEASE FOLLOW STEP 4 TO SWITCH THE BLUE AND RED WIRE FOR INSTALLING.
PLEASE CHECK IF THE SCOOTER HAS BUILT-IN LOCK OF THE SEAT. IF IT DOES,PLEASE RECONNECT THE WIRE OF BUILT-IN LOCK IN ORDER TO MAKE INJECTOR WORK NORMALLY.