


BEARING TYPE LONGER BRAKE REAR ARM JET-POWER 125 INSTALLING MANUAL

PARTS LIST:


- A---LONGER BRAKE REAR ARM
- B---BEARING BUSH
- C---PIN
- D---BRAKE ADJUST SCREW
- E---NCY BRAKE REAR ARM

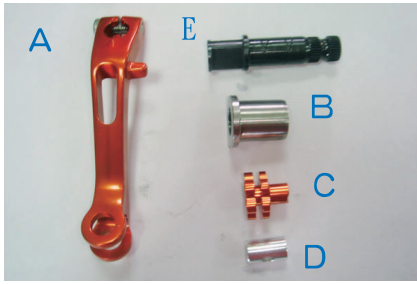


1. TAKE OFF RIM.




2. TAKE OFF BRAKE SHOE.

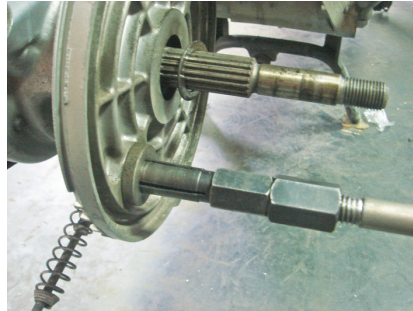

3. USE TOOL TO TAKE OFF BEARING.

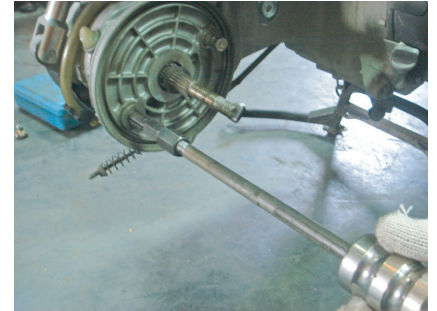


3. USE TOOL TO TAKE OFF BEARING.

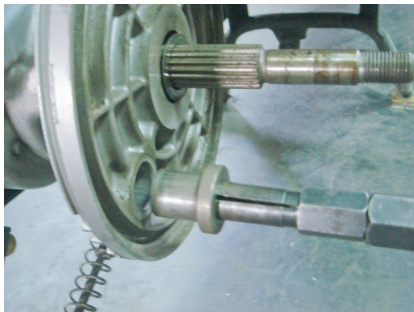

4. TAKE OFF ORIGINAL BRAKE BUSH.



5. PLEASE ADD SOME ENGINE OIL BEFORE INSTALLING BEARING.

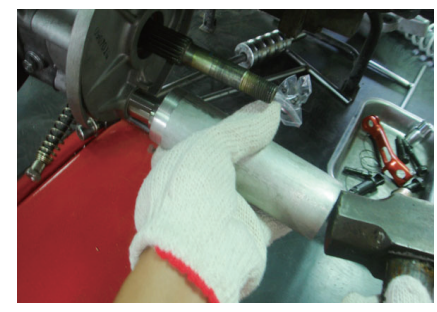


6. LIGHTLY BEAT BEARING BUSH INSIDE. (BEAT WITH SMALL ALUMINUM BLOCK).




7. INSTALL NCY BRAKE REAR ARM.



8. INSTALL BRAKE SHOE.

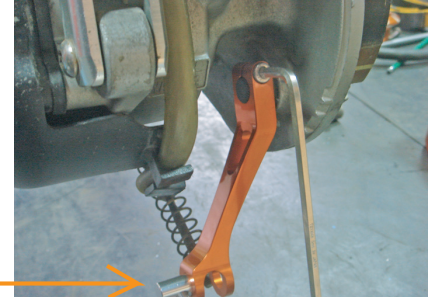

9. INSTALL LONGER BRAKE REAR ARM AND THEN ADJUST THE ANGLE. FINALLY USE RATCHETING WRENCH TO LOCK WELL.

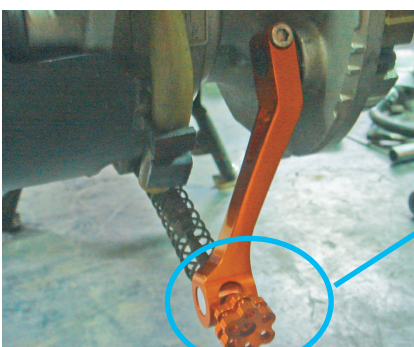

10. INSTALL BRAKE ADJUST SCREW WELL.



11. FINISH.