

# NEW CYGNUS ALUMINUM FRONT FORKS 41MM MANUAL



## PARTS LIST:

a. b: ALUMINUM FRONT FORKS 41MM & ALUMINUM STEERING STEM

c: CALIPER SCREW (STAINLESS HEX SOCKET CAP SCREW)

M10\*1.25\*40---2PCS

d: STEEL WASHES OUTER 31.7\* INNER 13.2\*THICK 2.45

e: EP TITANIUM FRONT RIM AXLE FOR ALUMINUM FRONT FORKS 41MM


f: FRONT FENDER RING

g: FRONT FENDER SCREW (STAINLESS HEX SOCKET CAP SCREW)


M6\*1.0\*16



1. FIRST INSTALL ALUMINUM STEERING STEM AND ALUMINUM FRONT FORKS 41MM

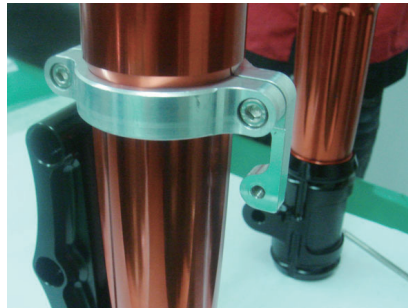

2. INSTALL FRONT FENDER RING ON ALUMINUM FRONT FORKS 41MM WITH FRONT FENDER SCREW (STAINLESS HEX SOCKET CAP SCREW) M6\*1.0\*16

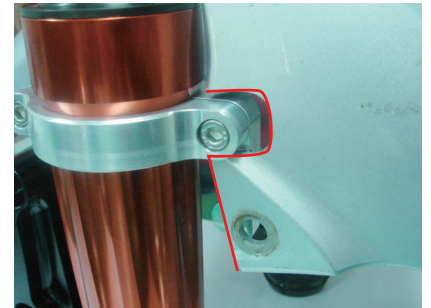

3. AMEND ORIGINAL FRONT FENDER AS THE PHOTO



4. USE ORIGINAL FRONT FENDER SCREW TO LOCK FRONT FENDER AND FRONT FENDER RING. . AND THEN LOCK STEP NO. 2



5. INSTALL ALUMINUM FRONT FORKS 41MM, EP TITANIUM FRONT RIM AXLE, AND STEEL WASHER ON RIM



6. CHANGE ORIGINAL CALIPER SCREW TO NCY CALIPER SCREW



7. FINISH

## NOTICE:

1. THIS PARTS IS FOR NEW CYGNUS, IF YOU INSTALL THIS PARTS SET TO CYGNUS, PLEASE CHANGE NEW CYGNUS BRAKE DISK 245MM AND NEW CYGNUS CALIPER.

2. AFTER INSTALLING THIS PARTS SET, PLEASE RIDING ABOUT 100MM FIRST AND THEN TRY TO BRAKE TO MAKE THE FRONT FORKS OIL CYCLE WORK TO GET FRONT FORKS WORK WELL.