

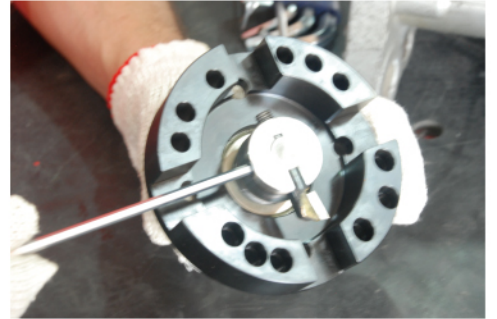
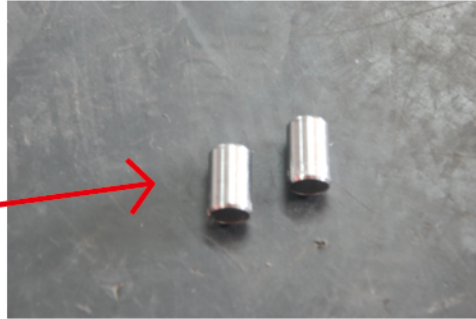
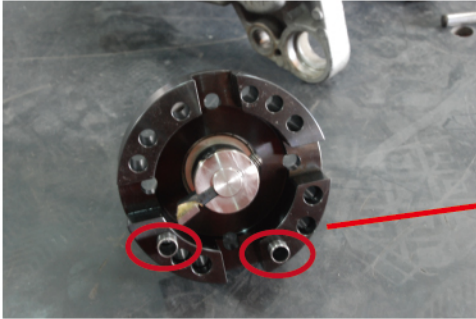
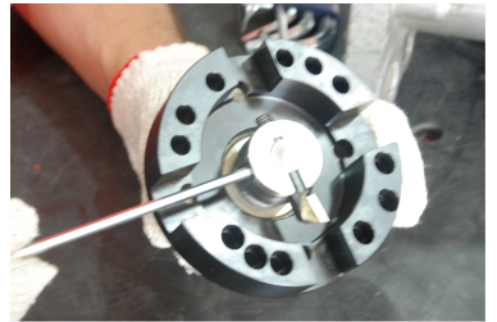


ENGINE BORE UP TOOL INSTALLING MANUAL

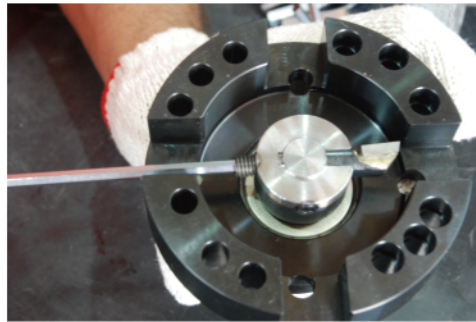

LOCATING PIN:
1. PLEASE INSTALL LOCATING PIN FOR YAMAHA, KYMCO, SYM MODELS.
2. PLEASE NOT INSTALL LOCATING PIN FOR GY6 MODEL.


1. LOOSE SCREWS OF CUTTING TOOL.

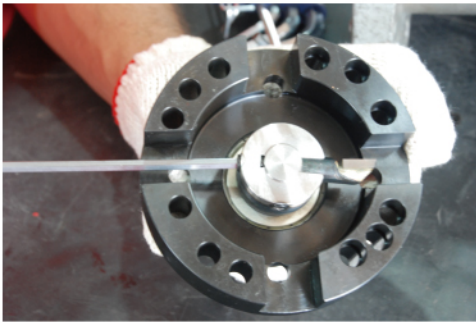

2. ADJUST CUTTING TOOL TO THE FIT LENGTH.

3. ADJUST CUTTING TOOL TO THE FIT LENGTH.

4. LOCK SCREWS OF CUTTING TOOL WELL.

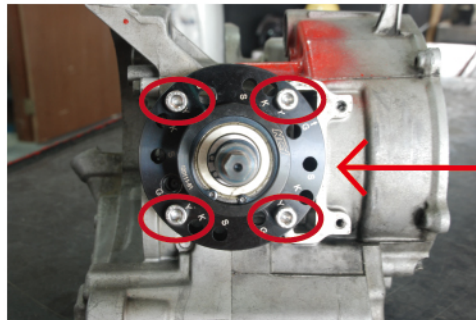

5. PLEASE NOTE THE UP ↑ OF TOOL TOWARD CHAIN DIRECTION AS INSTALLING.

6. INSTALL CUTTING TOOL INTO ENGINE BODY AND LOCK SCREWS WELL.

HEX SOCKET SCREWS: M8*1.25