


# ZOOMER 50 無限速CDI安裝說明

## ZOOMER 50 UNLIMITED CDI INSTALLING MANUAL




零配件介紹:  
CDI本體\*1  
配線組\*1

PARTS LIST:  
1. CDI\*1  
2. WIRE SET\*1

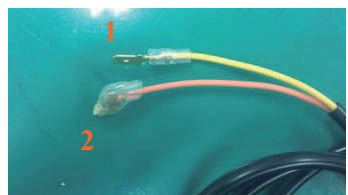

配線組插頭介紹  
1. 接原廠線組高壓端(車上配線黑黃)  
2. 接車上高壓線圈  
3. 跨接車上電源線(車上配線綠. 紅)  
4. 跨接車上電源線(車上配線紅)  
5. 接車上電盤訊號線(車上配線藍)  
6. CDI本體接頭

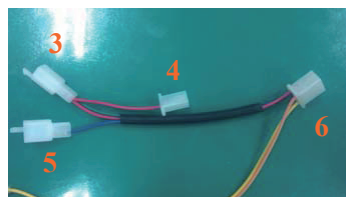

NCY WIRING SETS  
WIRE 1-YELLOW (CONNECT TO ORIGINAL HIGH-VOLTAGE END)  
WIRE 2-ORANGE (CONNECT TO HIGH TENSION COIL)  
PLUG 3 (CROSS OVER TO POWER CORD)  
PLUG 4 (CROSS OVER TO POWER CORD)  
PLUG 5-BLUE WIRE (CONNECT TO ALTERNATOR SIGNAL CORD)  
PLUG 6-(CONNECT TO CDI)

配線組安裝區介紹  
WIRE SETTING AREAS



配線組1.2配置區  
1, 2 WIRE SETTING AREA


配線組 3.4.5配置區  
3, 4, 5 WIRE SETTING AREA

安裝說明:將前面板拆除.將綠線.紅線端拔除  
如(左圖).再將線組3.4號插頭端至入如(右圖)  
在將線組插頭5置入電盤空角插頭處如(右圖)

INSTALLING MANUAL:  
TAKE APART THE FRONT PANEL, REMOVE THE ORIGINAL PLUG OF WIRE GREEN AND RED (SEE LEFT).  
RECONNECT THE NCY PLUG 3 & 4 ACCORDINGLY (SEE RIGHT).  
CONNECT THE PLUG 5 TO SPATIAL WIRE BLUE (SEE RIGHT).



左圖/LEFT

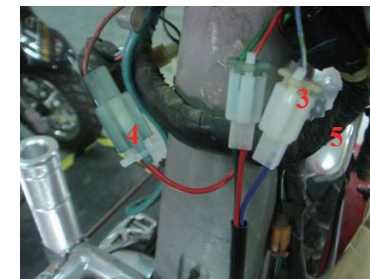

右圖/RIGHT

REMOVE THE ORIGINAL BLACK-YELLOW WIRE FROM HIGH TENSION COIL (SEE PIC. 1).  
CONNECT THE WIRE 1 -YELLOW WIRE TO BLACK-YELLOW WIRE (SEE PIC. 2).  
WIRE 2-ORANGE WIRE PLUGS IN THE ORIGINAL HIGH TENSION COIL (SEE PIC. 3)

在將原廠高壓線圈高壓端拔除(如圖1黑黃線).  
再將拔除端置入線組1號插頭(如圖2黃線端).  
再將線組 2號插頭(橘線)置入原車上高壓線圈即可(如圖3)

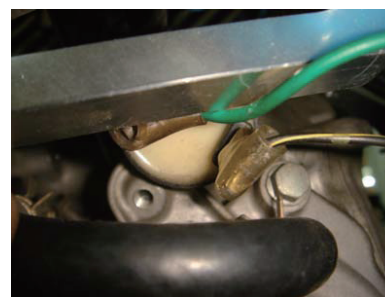


圖1/PIC. 1



圖2/PIC. 2



圖3/PIC. 3