




ZOOMER 50 REAR SHOCK ABSORBER INSTALLING NOTES

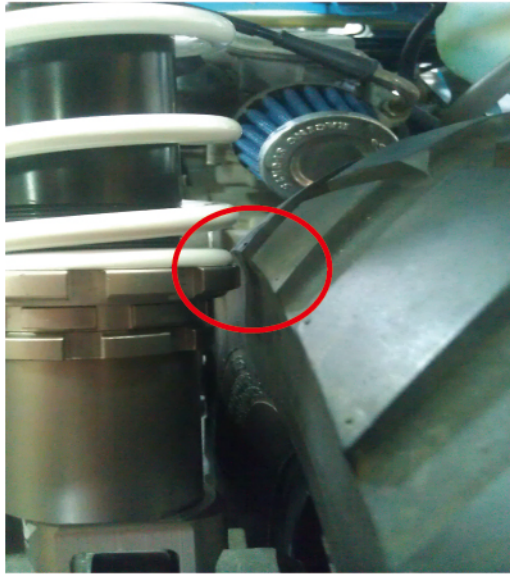

BECAUSE OF BORE UP SHOCK BOTTLE & SPRING, BOTTOM OF SHOCK WILL BE TOO CLOSE TO TIRE AS PHOTO.

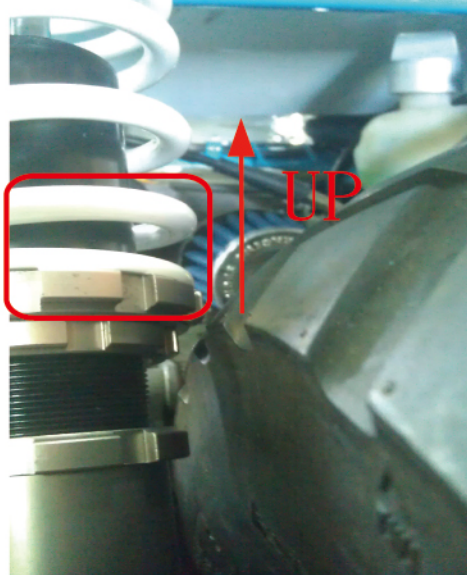

SUGGEST TO ADJUST UP SPRING AND BOTTOM AWAY TIRE AS PHOTO.

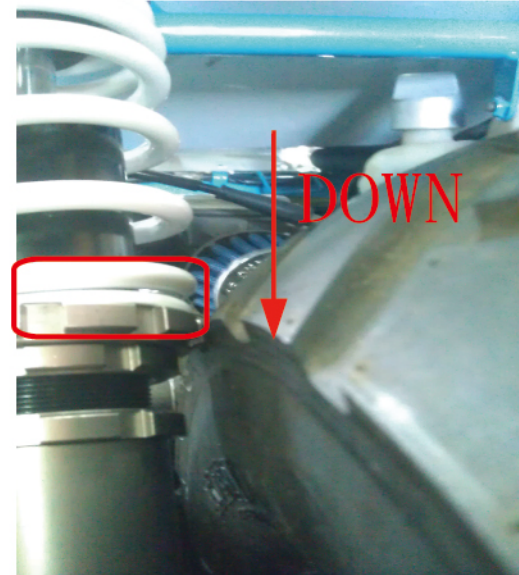

SUGGEST TO ADJUST DOWN SPRING AND BOTTOM AWAY TIRE AS PHOTO.