


PCX 125前叉安裝說明

HONDA 125 PCX FRONT FORKS INSTALLING

步驟1/STEP 1 :

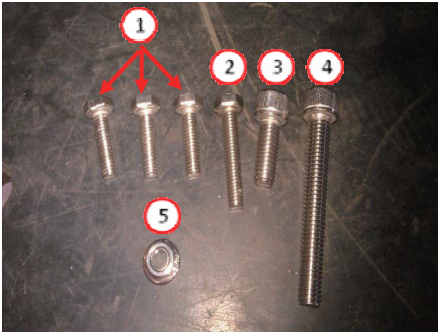

所需零件/PARTS LIST

- ① 外六角螺絲 (M6X1.25X20) , 數量3支
Hexagon Head Screws (M6X1.25X20) *3 PCS
- ② 外六角螺絲 (M6X1.25X30) , 數量1支
Hexagon Head Screws (M6X1.25X30) *1 PC
- ③ 內六角螺絲 (M8X1.25X20) , 數量1支
Indented Hexagon Head Tapping Screws (M8X1.25X20) *1 PC
- ④ 內六角螺絲 (M8X1.25X55) , 數量1支
Indented Hexagon Head Tapping Screws (M8X1.25X55) *1 PC
- ⑤ 凸緣螺母 (M6X1.25) , 數量1個
Hex Ribbed Flange Nuts (M6X1.25) *1 PC

步驟5/STEP 5 :



- 5. 將凸緣螺母安裝於高壓油管架子。
FASTEN THE NUT ON HIGH PRESSURE OIL TUBE BRACKET.

步驟2/STEP 2 :



- 2. 人站車頭看為左邊前叉，先把螺絲固定於土除。
(請勿鎖緊以便安裝前輪)
FASTEN THE RIGHT FRONT FORK ON THE FENDER.
(PLEASE DON' T TIGHTEN THEM YET)

- 2-1. 此為M6X1.25X20外六角螺絲
Hexagon Head Screws (M6X1.25X20)

步驟6/STEP 6 :



- 6-1. 此為 M8X1.25X55 內六角螺絲。
Indented Hexagon Head Tapping Screw (M8X1.25X55)
- 6-2. 此為 M8X1.25X20 內六角螺絲。
Indented Hexagon Head Tapping Screw (M8X1.25X20)

步驟3/STEP 3 :



- 3. 人站車頭看為右邊前叉，先把螺絲固定於土除。
(請勿鎖緊以便安裝前輪)
FASTEN THE LEFT FRONT FORK ON THE FENDER.
(PLEASE DON' T TIGHTEN THEM YET)

- 3-1. 此為M6X1.25X20 外六角螺絲。
Hexagon Head Screw (M6X1.25X20)

- 3-2. 此為M6X1.25X30 外六角螺絲。
Hexagon Head Screw (M6X1.25X30)

步驟7/STEP 7 :



- 7. 安裝好輪框。
INSTALL THE RIM.

步驟4/STEP 4 :



- 4. 將螺絲鎖出，以便安裝高壓油管架子。
PROTUDE THE SCREW (3-2. Screw) TO INSTALL HIGH PRESSURE OIL TUBE BRACKET.

步驟8/STEP 8 :



- 8. 輪框安裝好在以工具將土除鎖緊即可。
AFTER FIXED THE RIM, USE TOOL TO FASTEN THE FENDER TIGHTLY.